


Combo Bin

TABLE

Games

Assembly instructions

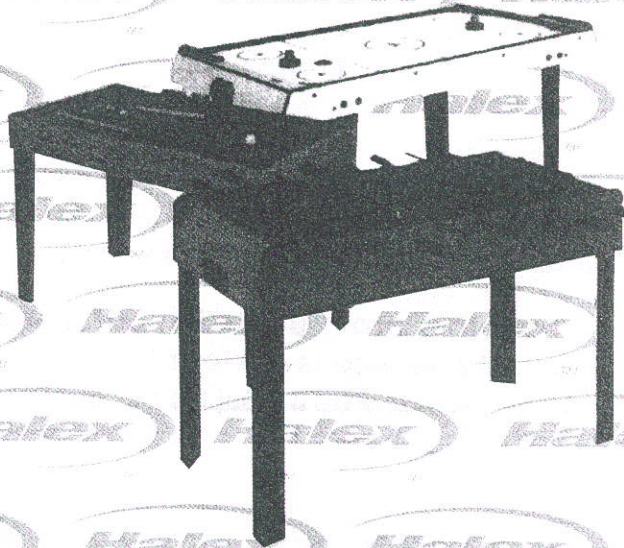

50734

LIMITED 90 DAY WARRANTY

This Halex product is warranted to be free from defects in workmanship or materials at the time of purchase for a period of 90 (ninety) days. Certain restrictions apply (see below).

Should any evidence of defects appear within the limited warranty period after the date of purchase, Regent Sports will either send replacement parts or advise of another course of action. A list of replaceable parts can be found on the parts order form page of this manual. Parts not listed on this order form are not replaceable. **Table tops, playing surfaces, and main frames are not replaceable.** This warranty covers normal consumer use and does not cover failures, which result from alterations, accidents, misuse, abuse, or neglect.

For prompt warranty service and special offers, please register your Halex product at our customer service center by visiting our website at: www.regent-halex.com. Enter the following unique registration number followed by the item number of your table found on the cover of this manual: 1ZAK7 _____. You can also register your product on our automated voice recognition system at the toll free number below. You must register your product within 30 days of purchase to be eligible for warranty service. Please make sure to visit our website to order additional parts not covered under the warranty, as well as on-line instruction manuals and new product information. You may also order parts by calling our automated voice recognition system.

A purchase receipt or other proof of date of purchase will be required before warranty service is performed. Requests for warranty service can be provided by e-mailing the customer service department at cstables@regent-halex.com or by calling customer service at:

877-516-9707 (Toll Free)

10:00 AM to 6:00 PM, EST. (Dec. through Jan.)

10:00 AM to 5:00 PM, EST. (Feb. through Nov.)

Or send request in writing to:

Regent Sports Corporation
45 Ranick Road
Hauppauge, NY 11788
Attn: Halex Customer Service

This warranty gives you specific legal rights and you may have other rights that vary from state to state.


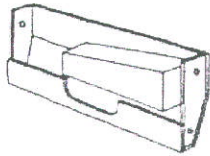
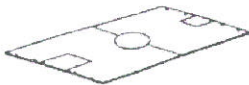 

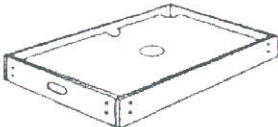

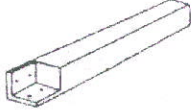 
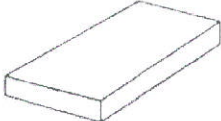

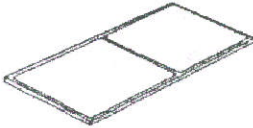

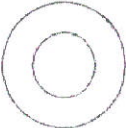

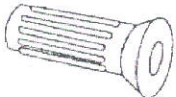 
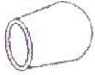 




 




CARE AND USE OF YOUR TABLE

WARNING: To reduce the risk of fire, electric shock or injury to persons, use this unit only in the manner intended by the manufacturer. If you have any question, contact the manufacturer. Before servicing or cleaning the unit, switch the power off and unplug the adapter from the wall outlet.

 



 


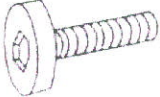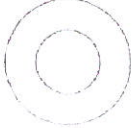




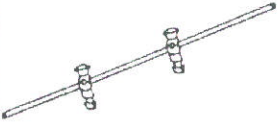
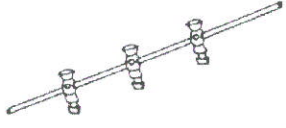
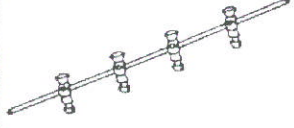
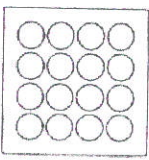

 

 


 

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat this safety feature.





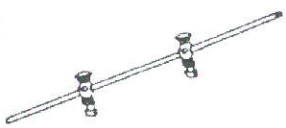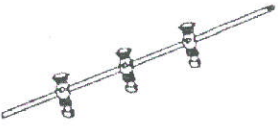


1. Use spray furniture polish to clean all exterior surfaces of your game table.
2. Use only a suitable 120v AC household outlet.
3. This product is intended for INDOOR use only.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the leg.
6. The fan should be unplugged before cleaning and servicing.

Parts List

<p>#1</p>  <p>Side panel 2Pieces</p>	<p>#2</p>  <p>End panel 2Pieces</p>	<p>#3</p>  <p>Soccer Playing surface 1Piece</p>	<p>#4</p>  <p>Field support brace 2Pieces</p>
<p>#5</p>  <p>Billiard cabinet 1Piece</p>	<p>#6</p>  <p>Billiard Playing Surface 1Piece</p>	<p>#7</p>  <p>Leg 4Pieces</p>	<p>#8</p>  <p>Playing Cards 1Piece</p>
<p>#9</p>  <p>Hockey table 1Piece</p>	<p>#10</p>  <p>Table Tennis Top 1Piece</p>	<p>#11</p>  <p>Shuffleboard Bowling Board 1piece</p>	<p>#12</p>  <p>Rod washer 16Piece</p>
<p>#13</p>  <p>Sponge rings 16Piece</p>	<p>#14</p>  <p>Handle 8Pieces</p>	<p>#15</p>  <p>Rod end cap 8Pieces</p>	<p>#16</p>  <p>1/4"X1-1/2" bolt 8Pieces</p>
<p>#17</p>  <p>1/4" Washer 8Pieces</p>	<p>#18</p>  <p>1/4" Support rod 2Pieces</p>	<p>#19</p>  <p>1/4" Hex nut 4Pieces</p>	<p>#20</p>  <p>5/16"X1-1/8" Bolt 16Pieces</p>
<p>#21</p>  <p>5/16" Washer 16Pieces</p>	<p>#22</p>  <p>F4X1" Screw 4Pieces</p>	<p>#23</p>  <p>W/P3X1" Screw 8Pieces</p>	<p>#24</p>  <p>P3X5/8" Screw 4Pieces</p>

Parts List Continued

<p>#25</p>  <p>Chess set 1Set</p>	<p>#26</p>  <p>Checkers 1Set</p>	<p>#27</p>  <p>Dice 1Set</p>	<p>#28</p>  <p>Dice cup 1Set</p>
<p>#29</p>  <p>Slide scorer 2Pieces</p>	<p>#30</p>  <p>Hockey scorer 2Pieces</p>	<p>#31</p>  <p>Allen key tool 1piece</p>	<p>#32</p>  <p>Spanner 1piece</p>
<p>#33</p>  <p>Soccer ball 2Pieces</p>	<p>#34</p>  <p>Blue 2-man rod 1Piece</p>	<p>#35</p>  <p>Blue 3-man rod 2Pieces</p>	<p>#36</p>  <p>Blue 4-man rod 1Piece</p>
<p>#37</p>  <p>Red 2-man rod 1Piece</p>	<p>#38</p>  <p>Red 3-man rod 2Pieces</p>	<p>#39</p>  <p>Red 4-man rod 1Piece</p>	<p>#40</p>  <p>Billiard balls 1Set</p>
<p>#41</p>  <p>Cue stick 2Pieces</p>	<p>#42</p>  <p>Triangle 1Piece</p>	<p>#43</p>  <p>Table brush 1Piece</p>	<p>#44</p>  <p>Chalk 2Pieces</p>
<p>#45</p>  <p>Pusher 2Pieces</p>	<p>#46</p>  <p>Pusher felt sticker 2Piece</p>	<p>#47</p>  <p>Puck 2Pieces</p>	<p>#48</p>  <p>Table tennis paddle 2Pieces</p>

<p>#49</p>  <p>Table tennis net 1Piece</p>	<p>#50</p>  <p>Table tennis ball 2Pieces</p>	<p>#51</p>  <p>Bowling pin 1Set</p>	<p>#52</p>  <p>Bowling ball 1Piece</p>
<p>#53</p>  <p>Shuffleboard puck 1Set</p>	<p>#54</p>  <p>Hockey Stick 2Pieces</p>	<p>#55</p>  <p>1/4" Washer 4 Pieces</p>	

Step 1

Attach both end panels #2 to one side panel #1 using the 2" bolts #16 and " washers #17. Be sure the rod holes in the side panel are closest to the floor during this step. Place the rod washers #12 and sponge rings #13 on both ends of each player rod (the washer goes on the inside next to the player). Slide player rods #34 through #39 into the side panel in the exact configuration shown in diagram. Be sure the small hole at the end of the red player rods #37, #38, and #39 is through the side panel. The small hole at the end of the blue player rods #34, #35, and #36 should be furthest away from the side panel.

